





# **Smart Monitor Spacetronik** SPD-M777 / SPD-M775 / SPD-M772


# **USER MANUAL**








### 1. Parts and functions

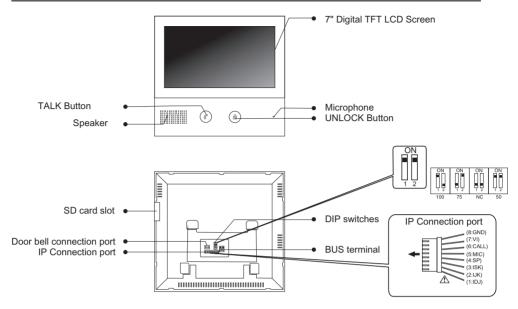

DIP switches

Bit state	Setting	Bit state	Setting
	Monitor at the end of the line		Reserved
	Monitor NOT at the end of the line		Reserved


## 2. Monitor mounting

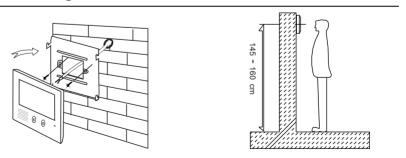

- 1. Using the screws to fix the mounting bracket on the wall.
- $\boldsymbol{2}$  . Connecting the system correctly, then hang the monitor on the mounting bracket firmly.

#### 3. Main menu

Press anywhere of the screen on monitor in standby mode, the main menu page will be shown as follows:

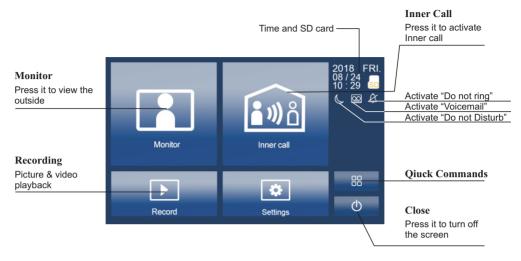

### 4. Basic door release operation



- 1. Press **CALL** button on outdoor station, the indoor monitor rings, meanwhile, the screen displays the visitor's image.
- 2. Press Answer on monitor, you can talk with the visitor for 100 seconds. Press Close to end the conversation. If nobody answers the call, the screen will be turned off automatically after 100 seconds.
- 3. During talking status, press Unlock to unlock the door. Press Function, press Switch camera to switch to extra camera. (If theres extra camera in the system). Press Uclose to end the communication.

#### 5. Monitor

Press Monitor on main menu to enter the door camera switching mode, if multi door stations are installed, you can select the door station or CCTV camera you want to monitor.







#### 6. Inner call

User in one apartment can call other apartment in the system. Press Inner Call to enter Inner call page, use to select next page, press call another monitor.







#### 7. Record-Picture / Video / Audio

 
- (1). **Picture / video record**: 3 seconds after the call was received, the monitor will record a video/picture automatically. Or you can press Function, and then to record the visitor's video/picture manually when the monitor in monitoring or calling state.
- (2). **Audio Record**: Audio recording will be activated in two situations.
  - 2.1. When you call other apartments (Inner Call).
  - 2.2. If you select SD card as storage location, the audio recording will be activated when the door station call the monitor.
- (3). Video/Picture/Audio playback: Press Record on main menu to select Video/picture/Audio playback. Press to select, press to pause, press to delete.





#### Note:

- 1. Only supports writing speeds greater than 4M/S SD card.
- 2. A new SD card must be formatted by the monitor before you using it.
- 3. Without SD card, you could only store 6 picture and 2 audio.
- 4. Up to 32G SD card.



Press Setting icon on main menu page , press to enter next page, press Voicemail to enter voicemail setting. You can record your own welcome message by press the recording button.





#### 8.2 Volume:

Press Settings on main menu page, press Volume to enter volume adjusting page.

Day time: 8:00 - 20:59, ringing volume adjusting range from 0-10.

Night time: 21:00 - 7:59, ringing volume adjusting range from 0-10.




### 8.3 Screen settings:

Press Settings on main menu page, press Color to enter color adjusting page.



### 8.4 Date & Time:

Press Settings on main menu page, press Time to enter date & time setting page.

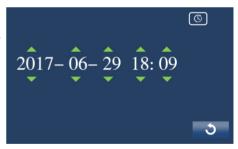

### 8.5 Storage-SD card

Press Storage to enter SD card setting page. Press Format to format the SD card Press Info to check the SD card storage information.



### 8.6 Optional

#### 1.Personalized settings:

page. You can adjust

- Press Settings on main menu page, press Optional to enter personalized setting
- Automatic / manual video recording
- Automatic / manual photography
- Turn on / off Inner Call
- Turn on / off Do Not Disturb





#### 2. Door station & Extra Camera:

If multi door stations and extra cameras installed in the system, you have to set the door station and camera quantity. The default setting is 1 door station and 0 camera.



#### 3. Ringtone:

If multi door stations and extra cameras



4. Network (Divert Call Function, With IP Module Only):



Network call disable: Calls from door station will not diverted.

#### 5. Language

Press Settings icon on main menu page, press Language to enter language setting page. There're twelve languages for optional: English, German, Italian, Spanish, Greek, French, Russian, Turkish and Dutch., etc




#### 6.Password

Room number password is 1111111(default). Modify room number password operation: input old password, setting new password. If you forget the room number password, you can press button and input 1111111, recover the room number password to 1111111.



### 9. Basic Wringing (With IP module)

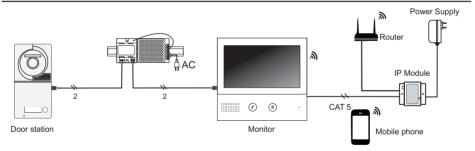

## 10. Specifications

• Power supply for monitor: DC 24V

• Power consumption: Standby 15mA, working 350mA

• Monitor screen: 7 inch digital color TFT

• Wiring: 2 wires, non-polarity

Dimensions:
M777 200 x 130 x 18 mm
M775 185 x 165 x 21 mm
M772 184 x 166 x 23 mm

The WEEE symbol (the crossed-out wheeled bin) using indicates that this product is not home waste. Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. In order to get detailed information about recycling this product please contact your retailer or a local authority.

Produced in ChRL for: DMTrade Mikołaj Tomaszewski; Wiśniowa 36; 64-000 Kościan; Poland NIP: PL 6981681757 sklep@dmtrade.pl Tel.: +48 661082052 +48 785082052